

The FortiGate-310B-RPS is an external redundant power supply that provides power to a FortiGate-310B board should the internal power supply fail.

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Power Requirements: AC 100-240V, 50-60Hz, -2A, DC 12V=12.5A

QuickStart Guide

FortiGate-310B-RPS



FORTINET®

© Copyright 2009 Fortinet Incorporated. All rights reserved.
Products mentioned in this document are trademarks or registered trademarks of their respective holders.
Regulatory Compliance
FCC Class A Part 15 CSA/CUS
29 May 2009

01-30007-97745-20090529

Visit these links for more information and documentation for your Fortinet product.

- Technical Documentation - <http://docs.forticare.com>
- Fortinet Knowledge Center - <http://kb.fortinet.com>
- Fortinet Technical Support - <http://support.fortinet.com>

Package Contents



AC Power Cable



Connecting

The FortiGate-310B-RPS redundant power supply unit supports a FortiGate-310B unit. Ensure the unit is placed on a stable surface. Connect the following to the FortiGate redundant power supply unit.

- Insert the DC power cable from the FortiGate-310B-RPS redundant power supply unit into the back of the FortiGate-310B unit.
- Connect the AC power cord to the FortiGate-310B-RPS redundant power supply unit.
- Connect the AC Power Cord to a surge protected power bar or power supply.

Caution: Please consult an professional electrician before connecting this product to a DC power supply source, or hire a licensed electrician to perform all connections.

FortiGate-310B (back)

